


# Chloraloy - Shower Pan Perspective

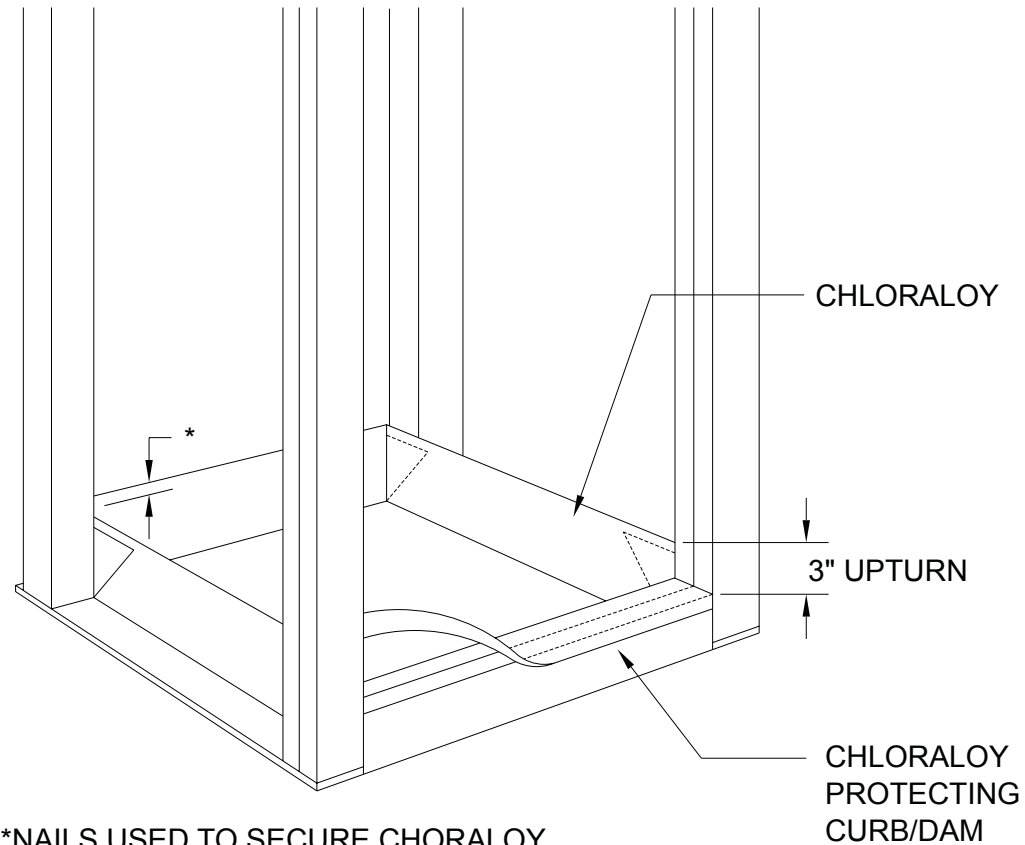

\*NAILS USED TO SECURE CHORALLOY  
TO BLOCKING/JOISTS SHOULD BE  
IN UPPER 1/2" OF UPTURNS.

