


# NobleSeal<sup>TS</sup> Shower Receptor Waterproofing


(NOT TO SCALE)

## NOTES:

1. WHEN NOBLESEAL TS IS FLASHED BEHIND THE BACKER BOARD, MECHANICAL FASTENERS CAN ONLY BE USED IN THE TOP 1" OF THE FLASHED MEMBRANE.
2. NOBLESEAL TS SHOULD BE FLASHED OVER THE DAM AND FASTENED ON THE OUTSIDE OF THE DAM. THERE SHOULD BE NO PENETRATIONS ON THE INSIDE OR TOP OF THE DAM.
3. PREFORMED DAM CORNERS ARE RECOMMENDED
4. NOBLE CURB COULD BE USED

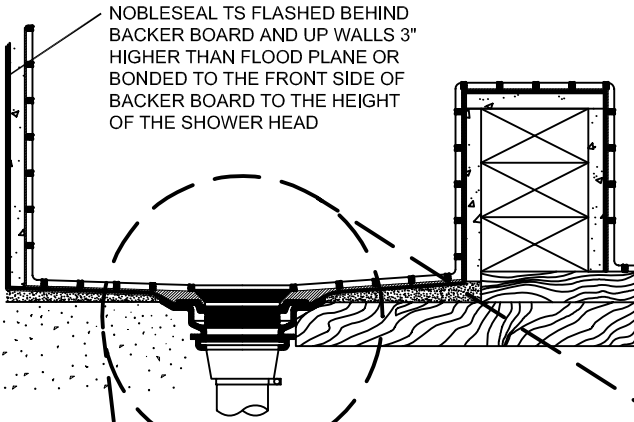

Shower Pan Cross Section

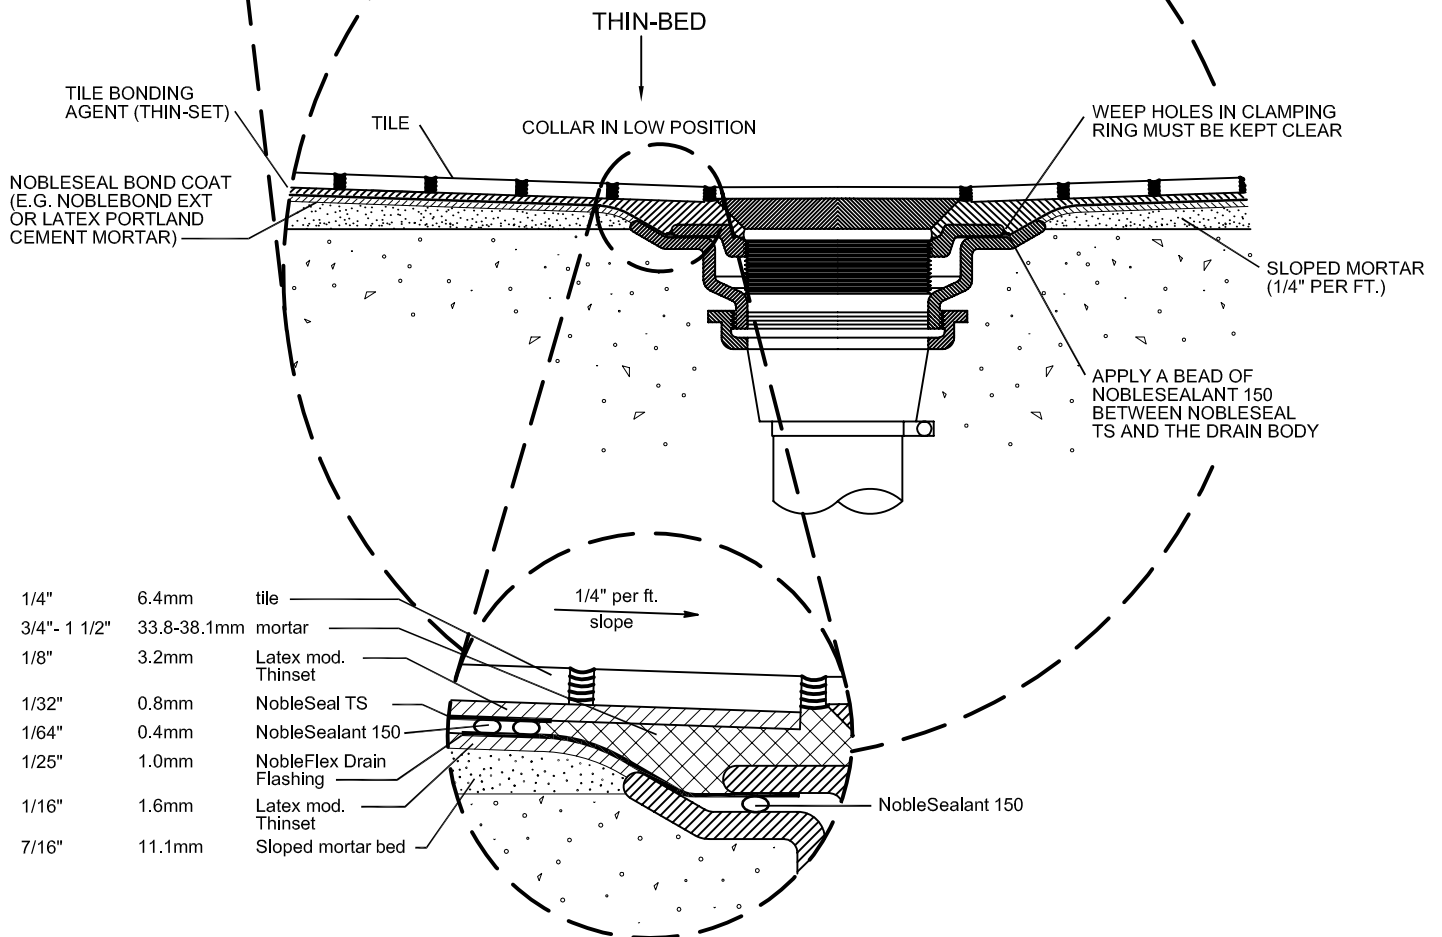

1/4"	6.4mm	tile
3/4" - 1 1/2"	33.8-38.1mm	mortar
1/8"	3.2mm	Latex mod. Thinset
1/32"	0.8mm	NobleSeal TS
1/64"	0.4mm	NobleSealant 150
1/25"	1.0mm	NobleFlex Drain Flashing
1/16"	1.6mm	Latex mod. Thinset
7/16"	11.1mm	Sloped mortar bed

1/4" per ft. slope

NobleSealant 150