


# Noble Corner Niche Installation Instructions

#2781 Four Shelf Corner Niche

#2782 Two Shelf Corner Niche

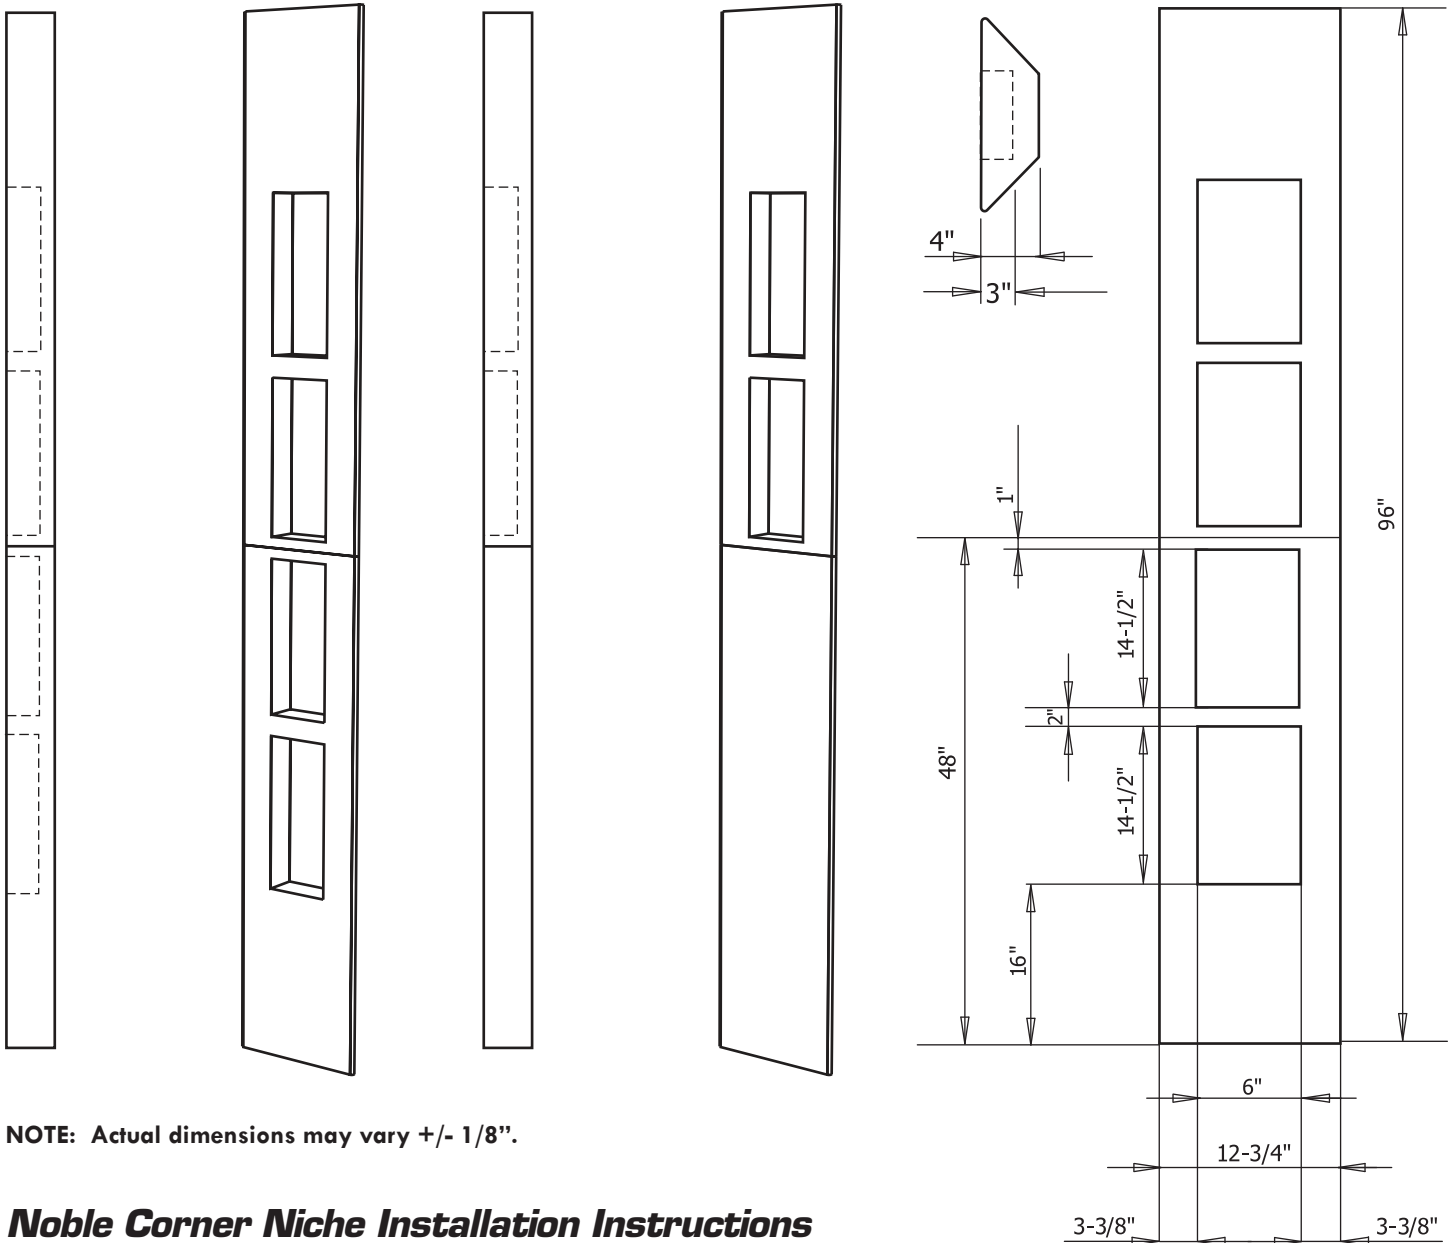

**NOTE:** Actual dimensions may vary +/- 1/8".

## Noble Corner Niche Installation Instructions

### 1.0 Product & Materials

- 1.1 Noble Corner Niches: are made from high density, extruded polystyrene with an acrylic polymer finish. Noble Corner Niches are waterproof and ready-to-tile. They are lightweight, durable and are not a food source for fungus and mold.
- 1.2 Other Tools & Materials Needed: Mortar Mix (for leveling), 1/4" x 1/4" Square Notch Trowel, Latex Modified Thin-Set, and 100% Silicone Sealant.

### 2.0 Preparatory Work

- 2.1 Shower should be waterproofed in accordance with Tile Council of North America (TCNA) guidelines and all applicable codes.
- 2.2 Ensure that the walls where the Corner Niche is to be installed are square and plumb.

### 3.0 Installing Corner Niche

- 3.1 Apply a latex modified thin-set to the walls behind and the floor under the Niche. Use a 1/4" X 1/4" square notch trowel.
- 3.2 Slide the Niche into the thin-set. Flatten the ridges with firm pressure.
- 3.3 Ensure that there is complete coverage of the thin-set.
- 3.4 Repeat steps 3.1 – 3.3 for the top section of the Corner Niche. Ensure that thin-set is applied between the top and bottom sections of the Corner Niche.
- 3.5 Once the Corner Niche is installed, use 100% Silicone Sealant to seal all joints where the Niche meets the walls. Do not seal where the Niche meets the floor.
- 3.6 Install tile or stone according to TCNA guidelines.

**NOTES:** For any situation not specifically covered, contact our Technical Department before proceeding. Follow TCNA Guidelines.

Form #NCN INST 01 /09

